

PERIODICAL DISPLAY SHELF-INSTALLATION INSTRUCTIONS

TOOLS REQUIRED

- Phillips Screwdriver - No. 2 Point
- 3/8" Open End Wrench or Socket w/ Ratchet Drive

PARTS LIST

QTY	DESCRIPTION
1	RIGHT HAND SIDE PLATE
1	LEFT HAND SIDE PLATE
8	No. 10 STEEL WASHER
4	10-24 LOCKNUTS W/ NYLON INSERTS
2	No. 8 x 1/2 LONG SELF TAPPING SCREWS
6	No. 8 x 1/2 LONG SHEET METAL SCREWS
6	NYLON TOGGLES
1	PERIODICAL DISPLAY SHELF

INSTALLATION INSTRUCTIONS

- Step 1. Attach pivot arms and side plates using steel washers and locknuts (see Fig. 1) for correct orientation of plates. DO NOT OVER TIGHTEN-ARMS MUST BE ABLE TO PIVOT ON PLATE.
- Step 2. Insert assembly into unit. Align rectangular slots in side plate with panel slots at correct height (see Fig. 2).
- Step 3. Press nylon toggles through slots in side plates and into panels slots. Be sure tabs on toggles face up/down (see Fig. 1).
- Step 4. Screw No. 8 screws into nylon toggles and tighten.
- Step 5. Adjust 10-24 locknuts on side plates until desired "stiffness" of movement is achieved.

